

FIG.1


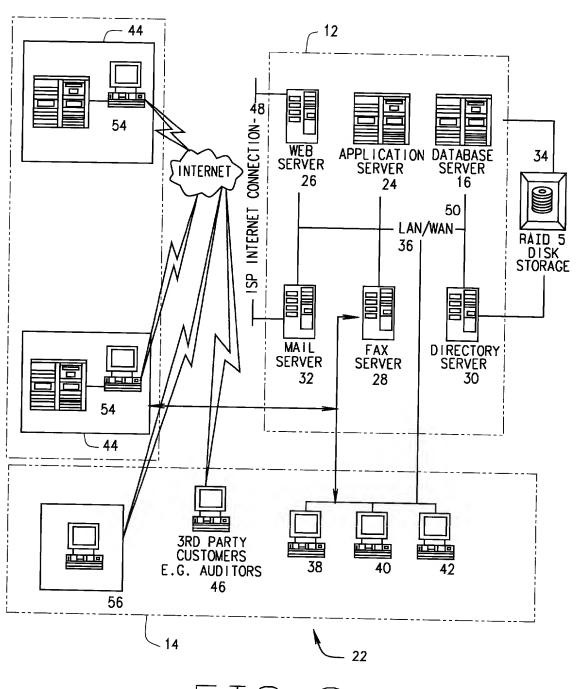



FIG.2



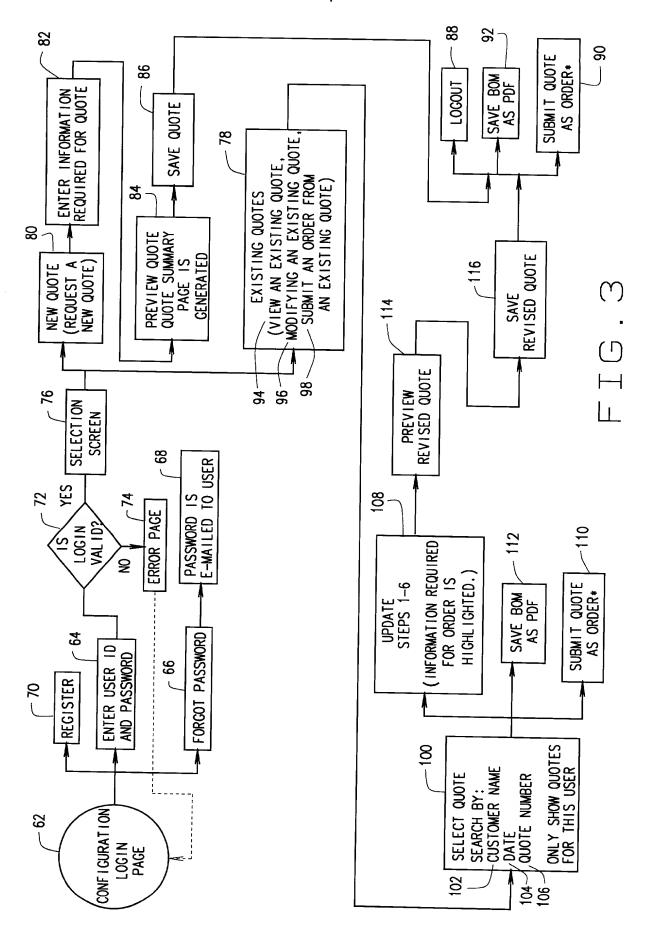

	120	142	144
	SEARCH A	LL MY QUOTES	REQUEST NEW QUOTE
PRODUCT CONFIGURATOR USER NAME: JOHN DOE 2/21/2001	CUSTOM	QUOTE SAVE ER NAME: NUMBER:	QUOTE SUBMIT ORDER
CUSTOMER DETAILS SYSTEM 1////// 2 3	ENGINE 130 GENERATOR 4	DISTRIBUTION BREAKER 5	PRICING 134 122
CUSTOMER LOOKUP			REQUIRED FOR ORDER
146			
148 CUSTOMER NAME CUSTOMER NUMBER		Q LOOK U	P 160
152 BILLING INFORMA	ATION —	 150	
ADDRESS LINE 1			
152 ADDRESS LINE 2			
154 — CITY			
156 - STATE			
158 ZIP			
			.162
	ļ	CONTINUE	—162 7
		D OOK! HOE	J
		136	38140
	PREVIEW Q	UOTE SAVE QU	JOTE SUBMIT ORDER

	170
	SEARCH ALL MY QUOTES REQUEST NEW QUOTE
	136 138 140
PRODUCT CONFIGURATOR	PREVIEW QUOTE SAVE QUOTE SUBMIT ORDER
USER NAME: JOHN DOE 2/21/2001	CUSTOMER NAME: QUOTE NUMBER:
L	
CUSTOMER DETAILS SYSTEM	GENERATOR BREAKER PRICING 2
1 2 // //// 3	4 5 6
PROJECT DETAILS172	☐ REQUIRED FOR ORDER
180	SHIPPING INFORMATION -174
PROJECT NAME	ADDRESS LINE 1
182 LOCATION LOCATION LOCATION LOCATION LOCATION	ADDRESS LINE 2
186	192 194 CITY
188 CONTACT EMAIL	196 V STATE
CONTACT PHONE	198 - ZIP
190 CONTACT FAX	178
ENGINEERING FIRM ~ 176	216 ELECTRICAL CONTRACTOR
<u></u>	COMPANY NAME
FIRM NAME	218
NAME	CONTRACTOR 206 NAME
202 CITY STATE	CONTRACTOR
204 208 COUNTRY	220 E-MAIL CONTRACTOR
C ENGINEER	222 PHONE
210 E-MAIL	CONTRACTOR
ENGINEER 212 PHONE	224 FAX
ENGINEER	
214 FAX	
	CONTINUE 226
	136138140
	PREVIEW QUOTE SAVE QUOTE SUBMIT ORDER

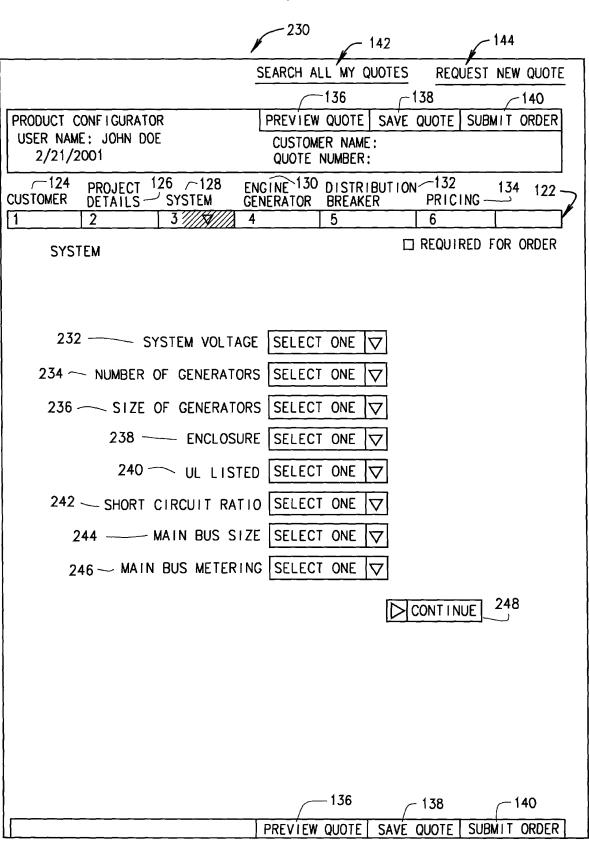

	25	142	144			
	SEARCH	ALL MY QUOTES	REQUEST NEW QUOTE			
			38 /140			
PRODUCT CONFIGURATOR USER NAME: JOHN DOE	PREVIEW QUOTE SAVE QUOTE SUBMIT ORDER					
2/21/2001	CUSTOMER NAME: QUOTE NUMBER:					
CUSTOMER DETAILS SYSTEM GENERATOR BREAKER PRICING 134 122						
1 2 3	4 // 💥 //	5	6			
ENGINE-GENERATOR			REQUIRED FOR ORDER			
252 —		_ 262				
MAKE OF GENERATOR SELECT (ONE 🗸	PT CONFIGURAT	ION SELECT ONE			
254 GOVERNOR/LOAD SELECT (ONE 🗸	264 BREAKER T	RIP SELECT ONE			
SHARING MODULE SELECT OF VOLTAGE REGULATION SELECT OF	ONE 1	266 BREAKER T	PE Landid			
(256	L	UNIT MC	DEL SECEOT ONE TO			
258 ALARM SHUTDOWN SELECT (ONE	BREAKER S	IZE SELECT ONE			
GROUNDING SYSTEM SELECT	ONE 🛆	200				
<u> 260</u>						
27	/0					
MX BOOO LED ANNUNCIATOR	YES 🗸		274			
SPARE INPUT NO.1 SELECT O	ONE 🛆	EVENT MESSAGE				
SPARE INPUT NO.2 SELECT (ONE 🛆	EVENT MESSAGE				
SPARE INPUT NO.3 SELECT (ONE 🗸	EVENT MESSAGE				
SPARE INPUT NO.4 SELECT (ONE 🗸	EVENT MESSAGE	:[
		[CONTINUE 276			
136 138 140						
PREVIEW QUOTE SAVE QUOTE SUBMIT ORDER						

FIG.7

	280	142	144		
	SEARCH AL	L MY QUOTES	REQUEST NEW QUOTE		
DDODUCT CONC. COLO. TOO		136	38 /140		
PRODUCT CONFIGURATOR USER NAME: JOHN DOE	PREVIEW		UOTE SUBMIT ORDER		
2/21/2001 CUSTOMER NAME: QUOTE NUMBER:					
124 PROJECT 126 ~128 ENGINE 130 DISTRIBUTION 132 134 400					
CUSTOMER DETAILS SYSTEM GENERATOR BREAKER PRICING 1 2 3 4 5 7 7 6					
DISTRIBUTION BREAKER			REQUIRED FOR ORDER		
STOWN BOLLOW BREAKER		_	THE PART OF THE PA		
282 TRIP UNIT TYPE		7			
<u> </u>]			
TRIP UNIT MODEL	▽	·]			
1 SELECT FRAME SIZE V SI	ELECT ATS	SELECT LOAD	BLOCK PRIORITY		
2 SELECT FRAME SIZE V SI	ELECT ATS 🗸	SELECT LOAD	BLOCK PRIORITY		
3 SELECT FRAME SIZE SE	ELECT ATS 🗸	SELECT LOAD	BLOCK PRIORITY		
4 SELECT FRAME SIZE V SE	LECT ATS	SELECT LOAD	BLOCK PRIORITY		
5 SELECT FRAME SIZE	LECT ATS	SELECT LOAD	BLOCK PRIORITY		
6 SELECT FRAME SIZE V SE	LECT ATS	SELECT LOAD	BLOCK PRIORITY 🗸		
7 SELECT FRAME SIZE V SE	LECT ATS	SELECT LOAD	BLOCK PRIORITY		
8 SELECT FRAME SIZE V SE	LECT ATS	SELECT LOAD	BLOCK PRIORITY		
9 SELECT FRAME SIZE V SE			BLOCK PRIORITY		
10 SELECT FRAME SIZE V SE	LECT ATS	SELECT LOAD	BLOCK PRIORITY		
11 SELECT FRAME SIZE V SE			BLOCK PRIORITY		
12 SELECT FRAME SIZE SE			BLOCK PRIORITY		
286		290	CONTINUE 292		
136					
PREVIEW QUOTE SAVE QUOTE SUBMIT ORDER					